



Dear Customer,

Quality has always been our driving force and founding Argon Audio is a natural extension of this philosophy.

We have 20 years' experience in creating and specifying high quality products, manufacturing them and selling them on to end users with **Value-for-Money** as the primary aim. And Argon Audio is a brand fully compliant with these values.

Design, and engineering is done in Denmark and manufacturing takes place in the Far East, where quality vendors are highly competitive - and as a result supply outstanding **Value-for-Money** products.

- To the delight of both ourselves and our customers!

Congratulations with your RADIO3, may it bring years of enjoyment.

Table of Content

1 Introduction	page 3
1.1 Safety	page 3
1.2 Contents of the box	page 3
2 Usage, controls and connections	page 4
3 Using Your Argon RADIO3	page 5
3.1 Quick Start	page 5
3.2 DAB mode	page 5-7
3.3 FM mode	page 7-8
3.4 AUX mode	page 8
3.5 BLUETOOTH mode	page 8-9
4 Using Basic Functions	page 9
4.1 Storing and recalling your stations	page 9
4.2 Setting EQ	page 9
4.3 Setting the alarm	page 10
4.4 Using of the Snooze function	page 10
4.5 <System> settings/info	page 11-12
5 Specifications	page 12

1. Introduction

1.1 Safety Instructions

- Do not use this product near water or moisture. Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.




1.2 Contents of the box;

- ARGON AUDIO RADIO3
- DC12V 1,5A Power adapter
- Bass port foam plug
 - Inserted into the bass port on the back of the RADIO3 it will lower the bass level – this can be useful if you place the RADIO3 close to a wall.
- Quick Start Guide - English.
- We recommend that you keep the original box and packing material for future transportation.
- We also recommend that you keep this User Manual for future use.

2. Usage, controls and connections

This chapter describes and shows you the location of the various controls and connections on your Argon RADIO3

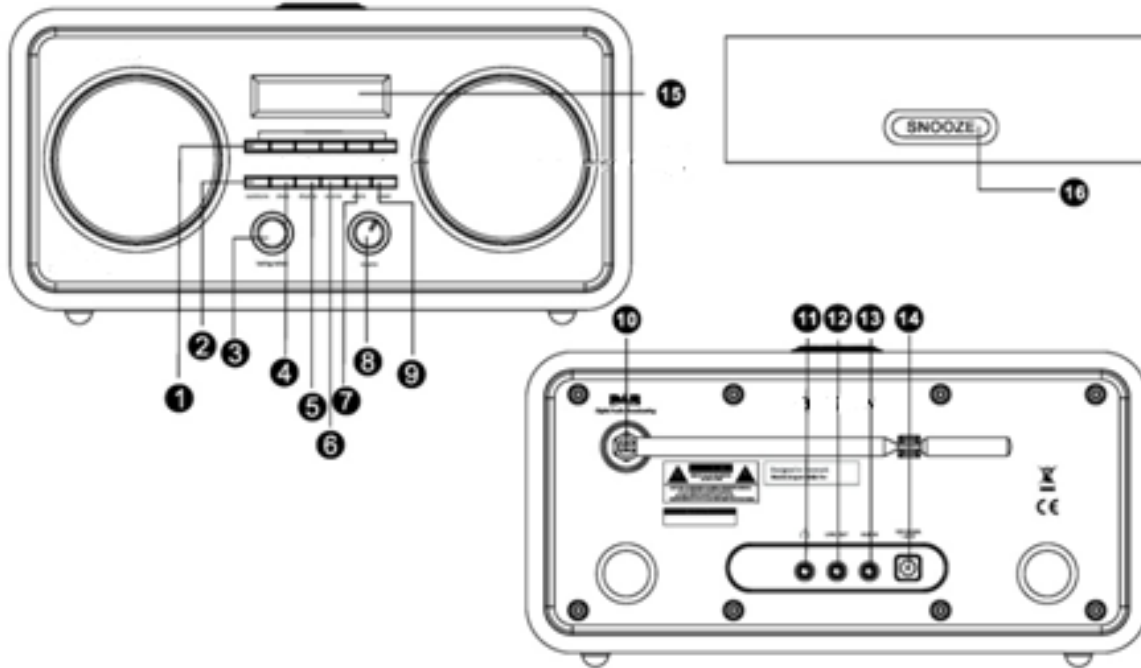

Usage, controls, connections	Function
1. Preset buttons and Bluetooth operating	1) In DAB and FM mode - Press 1-6 to recall a stored radio. 2) In Bluetooth mode - Press button 1 for Play/Pause Button 2-3 for skip song forward and skip back and button 6 for pairing mode.
2. Autotune button	Press to perform quick scan or full scan in DAB mode. Press to perform an automatic scan in FM mode.
3. Tuning knob	Turn to select options, scan or switch stations. Press to confirm selection or activate a function.
4. EQ	Press to choose your preferred EQ (sound) setting.
5. Display button	Press this button to change the display information shown.
6. Source button	Press to switch between DAB, FM, AUX IN and Bluetooth mode.
7. Alarm button	Press to activate and set your alarm.
8. Volume knob	Turn to adjust the volume of your radio.
9. Power button	Press to switch between Stand By and Playing Mode.
10. Antenna	You can adjust the antenna direction for better Reception.
11. Head phone connection	Connect stereo headphones with a 3.5mm (1/8") stereo plug to this jack.
12. Line out	Use this jack to provide the sound to other audio products.
13. Aux In connection	Connect an external device such as a Mobile to this jack with a 3.5 mm stereo-to stereo cable.
14. Power connection	Connect the power adapter to this connector.
15. Display	Backlit OLED display.
16. Snooze button	Press to temporarily turn off your alarm or press to mute sound in general.

3. Using Your Argon RADIO3 radio

3.1 Quick start

3.1.1 Start up

1. Extend the Antenna
2. Plug the Power supply into an electric outlet and into the back of the Radio.
3. Press "**Power**" (9) on
4. The Radio will start searching for DAB stations automatically. This may take a few minutes and the progress will be shown in the display.
5. Once finished searching, the Radio will start playing the first found station.

3.1.2 Basic Operating

1. Stations can be chosen by turning the "**Tuning/Select**" (3) knob/button.
2. Once the prefer station is found press the "**Tuning/Select**" (3) knob/button and the chosen station will start playing.
3. To store a station on one of the 1-6 preset buttons, press and hold the wished preset button for 3 sec., while playing the station that you want to store.
4. When stored, the display will show "Preset X saved"
5. To change between the Modes DAB, FM, AUX, BLUETOOTH press the "**Source**" (6) button repeatedly until you reach the preferred Mode.
6. To tune stations in FM Mode press and hold the "**Autotune**" (2) button for 3 sec. and the RADIO3 will scan to the next available station. You can store FM stations like mentioned in point 3.

3.2 DAB mode

1. If you are not in DAB mode, press the **Source** (6) button continuously, until it shows "DAB". It will start playing on the last played station.
The radio displays the correct time in DAB and FM mode, after a full scan has been performed in DAB mode (normally done automatically at first time installation). Your radio retrieves the time information from the DAB network.
2. While in DAB mode, press the **Source** (6) button, and the radio switches to FM mode.
3. While in FM mode, press the **Source** (6) button, and the radio switches to AUX IN mode.
4. You can switch the DAB/FM/AUX/BLUETOOTH by pressing **Source** (6) button at any time.

3.2.1 Scanning stations in DAB mode

There are two ways to scan for stations:

- Automatic full scan (**autotune** (2))
- Manual scan

To do an automatic full scan:

1. Press and hold the **Display** (5) button for three seconds and <Full scan> will show in the display.
2. Press the **Tuning/select** (3) button/knob and automatic full scan will start.
This may take a few minutes, during which you will see the displays in the sequence below.
When there scan is finished the first found station, starts to play immediately.
3. To preview another station, turn the **Tuning** (3) knob until the name of another station appears.
4. Press the **Tuning/select** (3) button/knob to select and listen to the new station.

To do a manual scan

1. Press and hold the **Display** (5) button for three seconds until the text in the display changes.
2. Turn the **Tuning/select** (3) button/knob until the display shows <Manual Tune>.
3. Press the **Tuning/select** (3) button/knob to activate manual tune.
4. To choose another frequency turn the **Tuning/select** (3) button/knob
5. Confirm by pressing the **Tuning/select** (3) button/knob.

3.2.2 Viewing additional Information (Display Information)

Display information containing useful ones such as; time, date, station name, signal strength, program type, frequency, signal error, kbps quality, including radio services, song titles, and special announcements sent by your DAB provider.

1. While playing a station in DAB mode, press the **Display** (5) button shortly. Additional information appears at the bottom row of the display.
2. Each time you press **Display** (5) button, new Display information will appear.

There are nine different types of Display information available for DAB mode:

- Programs being played. Station information with text messages such as song title, artiste name etc, can be displayed on some stations.
- Signal strength
- Station category
- Broadcast system/block
- Stations DAB+ broadcast frequency.
- Signal error
- Kbps quality and DAB reception type
- Time obtained automatically from a DAB transmission in your country or region.
- Date obtained automatically from a DAB transmission in your country or region.

3.2.3 Additional Menu functions in DAB mode

1. Pressing and holding the **Display** (5) button for 3 seconds, will bring you into the DAB Menu.
2. In the Menu you will find these options, by turning/using the **Tuning/select** (3) button/knob:

<Full scan>

see point 3.2.1 page 5

<Manual tune>

see point 3.2.1 page 6 (top of this page)

<DRC> Dynamic range compression

This function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder and loud sounds comparatively quieter.

Note: DRC only works if it is enabled by the broadcaster for a specific station.

There are three settings High, Low and Off.

1. Chose your preference by turning the **Tuning/select** (3) button/knob, confirm your choice by pressing the **Tuning/select** (3) button/knob.

<Prune>

This function removes all invalid stations, indicated in the station list with a '?' in front of the station name.

1. Choose "Yes" or "No" using the **Tuning/select** (3) button/knob
2. Confirm your choice by pressing the **Tuning/select** (3) button/knob.

<System>

See point 4.5 page 10

No matter if you are in DAB, FM or AUX mode the "System" settings/information will be the same.

To enter the System settings:

1. Press and holding the **Display** (5) button for 3 seconds.
2. Turn **Tuning/select** (3) button/knob until you see <System> in the display.
3. Confirm your choice by pressing the **Tuning/select** (3) button/knob.

3.3 FM Mode

3.3.1 Selecting FM mode

If you are not in FM mode:

1. Press the **Source** (6) button continuously, until it shows "FM". It will start playing on the last played station.

3.3.2 Scanning stations in FM mode

To do an autotune:

Make sure you are in FM mode.

1. Press the **Autotune** (2) button to scan for FM stations in ascending frequency.
2. To scan in descending frequency, press and hold the **Autotune** button for 3 seconds. Automatic scanning for an FM station begins. Once a station is successfully scanned it will start playing.

To do a manual scan:

1. Turn the **Tuning/select** (3) button/knob clockwise or anticlockwise until you hear an FM stations broadcast, or see the frequency you want.

3.3.3 Viewing additional Information (Display Information)

Display information containing useful ones such as; time, date, station name, signal strength, program type, frequency, signal error, kbps quality, including radio services, song titles, and special announcements sent by your DAB provider.

1. While playing a station in FM mode, press the **Display** (5) button shortly. Additional information appears at the bottom row of the display.
2. Each time you press **Display** (5) button, new Display information will appear.

There are seven different types of Display information available for FM mode:

- Station information along with text messages such as song title, artiste name etc, are displayed (if the station broadcasts RadioText).
- Signal strength
- Station category
- Stations broadcast frequency
- Stereo/Mono broadcast
- Time obtained automatically from a FM transmission in your country or region.
- Date obtained automatically from a FM transmission in your country or region.

3.3.4 Additional Menu functions in FM mode

1. Pressing and holding the **Display** (5) button for 3 seconds, will bring you into the FM Menu.

In the Menu you will find these options by turning/using the **Tuning/select** (3) button/knob.

<Scan setting>

see point 3.3.2 on page 7

<Audio setting>

This function is used for selecting audio mode (Auto or Mono)

Follow the steps below to set your radios audio output to Auto or Mono.

1. Use the **Tuning/select** (3) button/knob and turn until the display shows <Audio setting>
2. Press the **Tuning/select** (3) button/knob, A new menu appears
3. Using the **Tuning/select** (3) button/knob you can now choose between:
<Stereo allowed> or <Forced mono>
4. Make your choice and confirm/save your choice by pressing **Tuning/select** (3) button/knob

In Auto mode, the radio plays the programs default output: stereo or mono.

In Mono mode, the radio plays mono output only. Some stations sound better in this mode if the signal is not strong enough to receive noiseless stereo signal.

<System>

See point 4.5 page 10

3.4 AUX Mode

Using the AUX IN jack

1. Use a 3.5mm stereo-to-stereo cable (mini-jack) to connect an external device, like your Mobile phone, Laptop or iPod to the AUX IN jack, on the back of your radio.
2. Press the **Source** (6) button until the display shows "Aux". Once connected to the 3,5 mm plug on the back your radio will start playback of the music on the connected external device.
3. To adjust the radio volume level, you may need to adjust the volume on your external audio device. In other words you can adjust the sound level both on the Radio and on the External device.

3.4 BLUETOOTH Mode

3.4.1 To connect a playback (phone, tablet, Laptop etc) device to Bluetooth

1. Press the **Source** (6) button on RADIO3 until the display shows "Bluetooth"
2. If you connect a device for the first time or connect an additional device.
 - Activate Bluetooth on your playback device (ex. a phone), stay on the Bluetooth "screen" on your phone, choose "add a new device" on your phone.
 - Press the **6/pair** (1) button on RADIO3 front.
 - On your phone Argon RADIO3 will show up, press the Argon RADIO3 text.
 - Your phone might ask to allow for RADIO3 to "access contacts and call history". Accept this.
 - Your phone is now connected and you can start playback from phone to RADIO3.

3. Reconnecting a device that has already been used with RADIO3 is simple. RADIO3 remembers your connected device(s).
 - Notice: Bluetooth has to be turned “ON” on your phone!
 - Press the **Source** (6) button on RADIO3 until the display shows “Bluetooth”.
 - RADIO3 will automatically connect to the Bluetooth device that you have used before with RADIO3.
 - If more Bluetooth devices has been used and paired with RADIO3 before, RADIO3 will connect to the Bluetooth device that is closest in range.

3.4.2 Operating Bluetooth on RADIO3

1. Volume can be adjusted both on RADIO3 and on the Phone
2. Press the 1/pause/play (1) button on RADIO3 front to pause or start playback after pause.
3. Press the 2/skip track back (1) button on RADIO3 to skip track to previous track.
4. Press the 2/skip track forward (1) button on RADIO3 to skip track to next track.

4. Using Basic Functions

4.1 Storing and recalling your stations

Your radio can store up to 6 DAB **and** 6 FM radio stations as presets.

1. To store a station you are listening to, press and hold any one of button 1~6 number you want to store the station in.
2. Hold until Preset x stored (Where x is anyone of the 1~6 number selected) appears in the Display.
 - a. A new preset overrides an existing one when you store a new station over it.
3. To recall a station you press any one of the 1~6 number buttons, you will hear the corresponding station that you stored with the corresponding number buttons.

4.2 Equalizer (EQ) setting

This function gives you the choice to optimize the sound to your specific needs. Ex. If you use the RADIO3 mainly for talk-radio you will get optimal sound performance by choosing “Speech” setting in EQ. EQ setting can be changed at any time.

1. Press **EQ** (4) button and it will show “Equalizer < Normal > (or the setting you have chosen previously).
2. For changing the EQ setting, turn the **Tuning/select** (3) button/knob.
3. Each time you turn the **Tuning/select** (3) button/knob a new EQ setting will be displayed. And the sound will change according to the EQ setting type.
4. There are six different preset EQ’s Normal, Classic, Jazz, Pop, Rock, Speech and one adjustable preset – My EQ
5. Confirm your wished choice by pressing the **Tuning/select** (3) button/knob.
6. To set your own EQ press **Tuning/select** (3) button/knob, when “My EQ” is shown in the display. You can adjust Treble and Bass levels to your own wish.
7. When Treble or Bass is shown in the display press the turn the **Tuning/select** (3) button/knob to enter the setting then turn the **Tuning/select** (3) button/knob for +/- level.
8. When you reach your wished Treble or Bass level press the **Tuning/select** (3) button/knob and your setting is saved.
9. To exit the EQ setting press **Display** (5) button

4.3 Setting the alarm

The Radio has two Alarm presets

1. When your radio is in ON mode (playing), press the **Alarm** (7) button. The display will show "Alarm 1 setup". If you press one more time it will show "Alarm 2 setup". Press the **Tuning/select** (3) button/knob on either "Alarm 1 setup" or "Alarm 2 setup" depending on which Alarm you want to activate and the Alarm Wizard will start up.
2. Hours will start blinking in the display. Adjust time (hours) by turning the **Tuning/select** (3) button/knob until you reach the hour you want the alarm to start. Confirm by pressing the **Tuning/select** (3) button/knob
3. Next "minutes will start blinking. Adjust time (minutes) by turning the **Tuning/select** (3) button/knob until you reach the minutes you want the alarm to start. Confirm by pressing the **Tuning/select** (3) button/knob
4. Next Source will start blinking showing "Buzzer". Turn the **Tuning/select** (3) button/knob and scroll between Alarm start on "Buzzer", "DAB" or "FM" and confirm your choice by pressing the **Tuning/select** (3) button/knob.
5. Next choose "Last listened" on DAB and FM by pressing the **Tuning/select** (3) button/knob. Next by turning the **Tuning/select** (3) button/knob you can choose if the alarm has to be activated: Once, Daily, Weekdays or Weekend. Confirm your choice by pressing the **Tuning/select** (3) button/knob.
6. Next Date will start blinking, choose the date by turning the **Tuning/select** (3) button/knob and after you choose day, month and year remember to press the **Tuning/select** (3) button/knob to confirm each step.
7. Next the volume scale will show in the display. Choose your wished Alarm sound level by turning the **Tuning/select** (3) button/knob until you reach the volume level you want.
8. Finally a screen appears that shows "Alarm 1 OFF" where the "OFF" is blinking. Turn the **Tuning/select** (3) button/knob to show "YES" and press the **Tuning/select** (3) button/knob to confirm the whole alarm setup. When the Radio is turned off a Bell (alarm sign) is shown in the top right corner of the display. And you are ready.

4.3.1 To deactivate the alarm

1. Press **Snooze** (16) button to temporary stop the alarm.
2. To totally stop the alarm in Radio standby mode press the **Alarm** (7) button continuously until both Alarm 1 and Alarm 2 shows OFF.

4.4 Use of the Snooze function

1. When the radio is playing, you can press the **Snooze** (16) button to mute the radio.
2. To turn off the mute function, press the **Snooze** (16) button again. Notice that the Snooze function only mutes the build in speaker of the Radio. If you have connected your Radio to an external amplifier, the Snooze function will not work.
3. In alarm mode the Snooze function will, when pressing the button, mute the alarm for 5 minutes. After 5 minutes the alarm will sound again.

4.5 <System> settings and information

The radio has a system menu with various functions and information. The system menu can be accessed from all playback modes.

1. To enter the system settings press and hold the **Display** (5) button for three seconds.
2. Turn the **Tuning/select** (3) button/knob until it shows <System> in the display.
3. Activate the System menu by pressing the **Tuning/select** (3) button/knob.
4. Once in the system menu you can scroll through all the options by turning the **Tuning/select** (3) button/knob.

There are eight different system menu functions:

Sleep function, Equalizer (you also have as direct button on the front of the Radio), Time, Backlight, Inactive Standby, Language, Factory Reset, SW version.

4.5.1 Sleep

Setting and checking the sleep timer

This option turns the radio off automatically after a specified period.

1. Press the **Tuning/select** (3) button/knob and it will show "Sleep off".
2. Turn the **Tuning/select** (3) button/knob and for each "turn" it will increase the sleep intervals of 15 minutes, up to a maximum of 90 minutes.
3. Confirm your wished choice by pressing the **Tuning/select** (3) button/knob.
Your sleep function is now activated and an "S" will appear in the top right corner of the display.
4. To deactivate the sleep function follow the steps above, but confirm "Sleep off" instead of a Sleep time.

4.2.1 Checking the sleep timer setting

1. Sleep time will show in the top right corner of the display if 15 minutes has been chosen it will show "S15" and it will count down
2. To deactivate the sleep function follow the steps as in point 4.5.1, but confirm "Sleep off" instead of a Sleep time. Notice: When you press the **Power** (9) button, the sleep delay mode is deactivated.

4.5.2 Time

1. Access Time settings by pressing the **Tuning/select** (3) button/knob when <Time> is shown in the display.
2. In the Time menu you can choose either to <Set Time/Date> manually or to <Auto update>
3. Choose which one you want and confirm by pressing **Tuning/select** (3) button/knob.
It's recommended to have the setting on <Auto update>. This way the time and date will be updated automatically from either FM or DAB broadcasts.

4.5.3 Backlight

1. Access Backlight settings by pressing the **Tuning/select** (3) button/knob when <Backlight> is shown in the display.
2. Back light has 5 levels (1-5) turn the **Tuning/select** (3) button/knob until you reach your desired setting.
3. Press the **Tuning/select** (3) button/knob to confirm your choice.

4.5.4 Inactive standby

1. Press the **Display** (5) button for about 3 seconds until the menu appears.
2. Then turn the round **Tuning/Select** (3) button until it shows "System" in the display and select this with a press on the **Tuning/Select** (3) button.
3. Turn the round **Tuning/Select** (3) button until "Inactive Standby" appears in the display and select this by pressing the **Tuning/Select** (3) button.
4. Then by turning the **Tuning /Select** (3) button select " Timeout: 2,4,5,6 hours or Off" (factory setting is 2 hours). Activate the selected time by pressing the **Tuning/Select** (3) button.
5. Exit the setup menu by repeatedly pressing the **Display** (5) button.

4.5.5 Language

1. Access Language settings by pressing the **Tuning/select** (3) button/knob when <Language> is shown in the display. Language choices are: English, French, German and Italian.
2. Scroll through the language options by turning the **Tuning/select** (3) button/knob.
3. Press the **Tuning/select** (3) button/knob to confirm your choice.

4.5.6 Factory reset

1. Access Factory reset settings by pressing the **Tuning/select** (3) button/knob when <Factory reset> is shown in the display. You may want to erase your settings on your radio, including your presets and alarm and sleep delay settings.
2. Press the **Tuning/select** (3) button/knob to confirm. The Radio is now reset.

4.5.7 Software version (SW version)

1. Access Software version information by pressing the **Tuning/select** (3) button/knob when <SW version> is shown in the display.
2. Press the **Tuning/select** (3) button/knob to confirm.
The display now shows the software version of your Radio.

5. Specifications

Broadcast Frequency ranges supported:

DAB and DAB+: Band III: (174~240MHz)

FM: 87.5~108MHz

Audio Frequency Range: 70Hz ~ 20 kHz

Amplifier power/speaker: 10w/ 2x 3" long stroke, full range speakers with double magnet, 2x Bass reflex port/tube construction.

OLED display: 128x64 (4 line)

Input voltage: 12V DC/2A

Input connector/Source: Bluetooth playback from any Bluetooth enabled audio player, 3.5mm auxiliary input (AUX IN) for audio players like a Phone

Output connector: 3.5mm jack for connection to an external amplifier (stereo output)

Headphone connector: 3.5mm jack for headphone (stereo signal)

Dimensions (W x H X D): 205mmx138mmx113mm

Weight: 2.731 (2.147) kg