





JORDAN JX60.

PRELIMINARY BROSCHURE

We are happy to introduce the new JX60, a totally reworked unit sprung from the JX6rHD. Everything except the cone and rim changed, but still we made it very compatible with the previous model, so upgrading shouldn't be a hassle.

We kept the same dimensions, but removed the buck magnet for a more shallow assembly. A carefully selected spider has given us almost the same low Fs as with ferro fluid, but with the new motor, the HF has extended to almost 45 KHz, most likely making it the widest range 2" unit on the market. X-max is increased to +/- 1.8 p.m. Distortion is now less too.

We are using a new composite Glass Fiber reinforced chassis with a more open design for a better air flow. The lead out wires are replaced with gold plated soldering terminals connecting to new high quality tinsel leads. Sensitivity is up partly due to the new motor system, but also due to a little less impedance as the driver now is a 4 Ohm unit.


The JX60 features the unique Jordan Controflex metal cone

which allows this unit to effortlessly cover the range 100Hz to 30kHz. The resonant frequency of this unit is 100Hz which allows a single unit, in a 1.2 liter, totally enclosed box, to form the basis for a superb, satellite/sub-bass system together with JX125NG or JX150NG.


The JXR6 HD driver may also be used in multiple arrays, facilitated by the rectangular chassis. A Vertical, Linear Array System provides the most dramatic re-creation of live stage realism ever achieved. Grouping them in 4, 9 or 16 units will keep the initial impedance. More info will be found in our systems PDF in due time.


JX60 now also comes with individual parameters included in each box!

Available in June 2011.

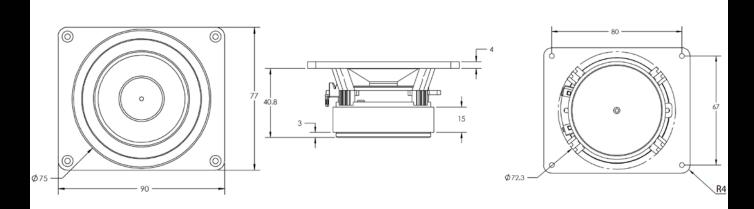




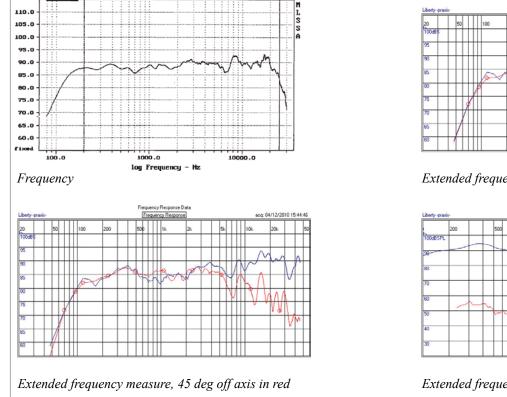

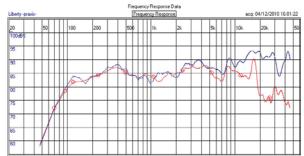

Extended frequency measure, 30 deg off axis in red

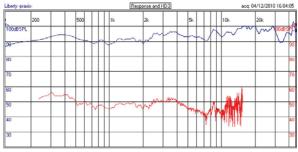

Extended frequency measure, distorsion in red.

Please note, the three Praxis measures are not made in an anechoic chamber or under the conditions stated below!

Parameters

Thiele/Small Parameters, 40hm

"Method: Fixed-Mmd (1.615 grams)" "OCR mode: Fixed (3.31 ohms)" "Area (Sd); 26.42 sq cm" "Series resistance: 75.00 ohms" "Stimulus level: 3.83 volts" "SPLref reference impedance: 8 ohms" "Large units (volume = liters, mass = grams)" 0.337 "RMSE-free Ohms" 105.120 "Fs Rz" 3.310 "Re Ohms" 11.813 "Res Ohms" 2.225 "Qms" 0.623 "Qes " 0.487 "Qts " 0.060 "L1 mR" 0.160 "L2 mH" 0.679 "R2 Ohms" 0.000 "RMSE-1oad Ohms" 1.328 "Vas (Sd) liters" 1.692 "MIns (Sd) grams" 1354.923 "Cms(Sd) ceM/Newton" 2.436 "B1(Sd) Tesla-M" 89.598 "SPLref(Sd) dB[8 ohms]" 0.045 "Rub-index" X-max: +/- 1.8mm (3.6mm p-p) Power:10W cont. 15W Max. In music

Test conditions:

Break in : 15min at 10V at resonance.
Equipment : MLSSA 10 WI Rev 8 with RCAI Box
Stimulus level for Parameter measurement : 3.83 V and 2.83 V for SPL.
Frequency plot (2 pi measurement) in flat baffle. Anechoic chamber 4 mtr width x 3 mtr depth. Walls lined up with 1 1/2' high density glass wool wedges.
Microphone : G.R.A.S. 1/2" Free Field Microphone 40AC with Preamp 26AK and Power module: 12AK
Temperature : 24 deg C, Humidity 80%
Fs Method : Fixed Mass

All parameters are preliminary and subject to change.